

KCD2—21N

A

0

A1

B

B

P1



AC2

16

功能/FUNCTION	
21N	ON-OFF-LAMP 4Pin
21	ON-OFF 4Pin
22N	ON-ON-LAMP 6Pin
22	ON-ON 6Pin
23	ON-OFF-ON 6Pin
21(ON)	(ON)-OFF 4Pin
21(OFF)	ON-(OFF) 4Pin
22(ON)	(ON)-ON 6Pin
23(ON)	(ON)-OFF-ON 6Pin
23(OFF)	(ON)-OFF-(ON) 6Pin
11	ON-OFF 2Pin
12	ON-ON 3Pin
13	ON-OFF-ON 3Pin






按钮/ROCKER	
A	平面/FLAT
C	弧面/SOFT LINE
P	橡胶罩防水型 Rubber/Waterproof
D	带猫眼灯 With Small LENS

盖印字 ROCKER PRINTING	
0	不印字NO PRN
2	— ○
3	○
6	○
28	◁ ○ ▷

底座/HOUSING	
A1	 MOUNTING SIZE-22X28
A2	 MOUNTING SIZE-22X30

面盖颜色 ROCKER COLOR	
B	黑色/BLACK
W	白色/WHITE
R	红色/RED
OR	黄色/Orange
G	绿色/GREEN
BL	蓝色/BLUE
GY	灰色/GREY
OR	黄色/Orange

底座颜色 HOUSING COLOR	
B	黑色/BLACK
W	白色/WHITE

端子/TERMINAL	
P1	 6.3
P2	 6.3
P3	 6.3
P4	 4.8
P5	 6.3 SCREW

灯电压 LIGHT VOLT	
无 BLANK	不带灯 NO LIGHT
AC1	120VAC
AC2	230VAC
DC1	12VDC
DC2	24VDC

电流/Rating	
16	16A
23	23A